


American Weigh Scales, Inc.

HB-Series Digital Bowl Scale

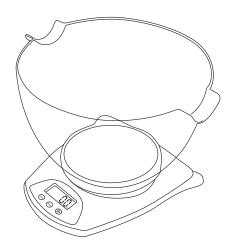

HB-6 **HB**-11

User Manual

American Weigh HB-Series

Thank you for purchasing the American Weigh HB-Series backlit touchscreen digital bench scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service.

Never load the scale with more than the maximum capacity. Overloading will permanently damage it! Avoid any exposure to extreme heat or cold. Your scale works better when operated at normal room temperature. Always allow the scale to acclimatize to normal room temperature for at least one hour before use. Give your scale sufficient warm up time. Usually 30-60 seconds before calibration to give the internal components a chance to stabilize.

Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and a close distance to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale. Handle with care. Gently apply all items to be weighed onto tray top. Although this scale is designed to be quite durable, try to avoid rough treatment as this may permanently damage the internal sensor.

Avoid shaking, dropping or otherwise shocking the scale. This is a precision instrument and must be handled with extreme care.

Only operate the scale on a stable, vibration free surface.

I. OPERATION

Place the scale on a level surface. If you want to weigh using the bowl, make sure it is on the scale before you turn the scale on.

- 1. Press the [ON/OFF] key.
- 2. Wait until "0.0" is displayed.
- Place the object(s) on the weighing platform (or in the weighing bowl).
- 4. Using the [UNIT] key, you can switch between weighing units.

II. TARE WEIGHING

Tare lets you subtract the weight of a container.

- 1. Turn on scale as described above.
- 2. Place the container/tare item on the platform. (such as the 4L detachable bowl)
- 3. Press [TARE] and wait until "0.0" is displayed.
- 4. You may now place items inside the container and obtain only the weight of those contents.

Specifications

10 Year Limited Warranty	10 Year Limi	Warranty
₹2032	2 x CR2032	Power
1.8 x 8.1 x 8.5"	1.8 x 8.	Base Dimensions (inches)
5.5 x 9.0 x 10.2 " (4 Liters)	5.5 x 9.0 x 10	Bowl Dimensions (inches)
lb:oz, oz, kg:g, g	lb:oz, oz	Units
(with touchscreen)	5 Digit Baclit LCD (with touchscreen)	Display
0.1oz/1g	0.1oz/0.5g	Resolution
11lb/ 5kg	5.5lb/ 2.5kg	Capacity
HB-11	НВ-6	Model